

Spare Parts for Predator 2700psi 7HP Power Washer *Gearbox Reduced

NO.	Description	CODE
1	Screw	(04.01.12.2800)
2	Drain plug	(04.02.09.0140)
3	Gasket drain plug	(04.01.01.1240)
4	venting plug	ZD0501020150 (05.01.02.0150)
5	Crankcase cover	ZD0402040120 (04.02.04.0120)
6	O-ring	(04.02.17.2420)
7	Crankcase	(04.02.01.0120)
8	Needle bearing	(04.01.06.1600)
9	O-ring	(04.01.01.3780)
11	Screw	(04.01.12.3280)
12	Oil seal,crankshaft	(04.02.19.0400)
13	Crankshaft 7HP	(04.02.01.0110)
13	Crankshaft 9HP	(04.02.02.1700)
14	Ball bearing	(04.01.06.4244)
15	Clip	(04.01.14.0700)
16	O-ring	(04.01.01.3800)
17	Retain ring	(04.01.14.0310)
18	oil level plate	(04.02.10.0060)
19	oil side glass	(04.02.10.0220)
20	O-ring, oil sight glass	(04.01.01.3100)
21	Cover,crankshaft	(04.02.06.0500)
22	Screw	(04.01.12.3280)
23	Connecting rod	ZD0402050380 (04.02.05.0380)
24	Fix pin	(04.02.16.1520)
25	plunger	(04.02.03.0250)
26	o-ring plunger	(04.02.12.0030)
27	Oil seal plunger	(04.02.20.0220)
28	Locating ring	(04.03.10.0100)
29	O-ring	ZD0401012720 (04.01.01.2720)
30	Low pressure seal	ZD0403081100 (04.03.08.1100)
31	Compaction ring	ZD0403093130 (04.03.09.3130)
32	Compaction flake	ZD0403093370 (04.03.09.3370)
33	High-pressure seal	ZD0403080610 (04.03.08.0610)
34	Supporting ring	ZD0403111020

		(04.03.11.1020)
35	Maniflod head	ZD0403010160 (04.03.01.0160)
36	O-ring	(04.01.01.1440)
37	Checking Valve assy	(05.02.01.0520)
38	O-ring	(04.01.01.1810)
39	Valve Plug	(04.03.07.0162)
40	Outlet plug	(04.05.08.0420)
41	Inlet plug	(04.05.08.0610)
42	Washer, bolt, manifold	(04.01.01.3800)
43	Maniflod fix bolt	(04.01.12.2980)
44	Screw	(04.01.12.3980)
45	Plastic cap,knob	(04.04.01.0340)
46	Knob	(04.04.03.0080)
47	Spring	(04.01.03.1090)
48	Spring seat	(04.04.04.0100)
49	Jam nut	(04.01.12.0510)
50	Fix screw	(04.04.02.0100)
51	Unloader valve assy	ZD0503040130 (05.03.04.0130)
52	Seat valve body	(04.04.12.0250)
53	O-ring, valve seat	(04.01.01.4740)
54	Gasket, unloader valve housing	(04.01.01.1860)
55	Detergent injector fitting	(04.05.07.0520)
56	O-ring, injector fitting	(04.01.01.3320)
57	Ball, injector fitting	(04.01.08.0240)
58	Spring, injector fitting	(04.01.03.1120)
59	Water outlet banjo bolt	(04.05.10.0160)
60	O-ring, outlet banjo bolt	(04.01.01.0780)
61	O-ring, unloader valve housing	(04.01.01.2600)
62	Unloader valve housing	(04.04.14.0100)
63	O-ring, outlet checking valve	(04.01.01.3280)
64	Outlet checking valve	(04.05.09.0160)
65	Spring, outlet checking valve	(04.01.03.2980)
66	O-ring, outlet fitting	(04.01.01.1160)
67	Quick disconnect outlet fitting	(05.04.02.0310)
68	Gasket, bypass housing	(04.01.01.2600)
69	Water Inlet banjo bolt	(04.05.10.0560)
70	O-ring, inlet banjo bolt	(04.01.01.1580)
71	Bypass housing BRASS	(04.04.14.1250)
72	Swivel nut, inlet connector	(04.05.05.0220)
73	Body, inlet connector	(04.05.04.0670)
74	Filter washer, inlet connector	(04.14.08.0160)